


1st Step

Connect


LOCK	E-DC12
12V ←	12V
GND ←	V0
L- ←	S-
L+ ←	S+

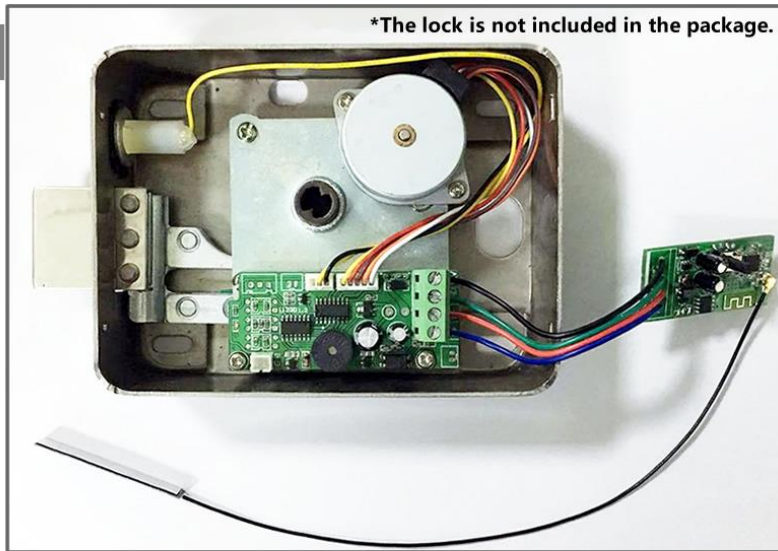

2nd Step

Tidy Up

Fixed with double sided adhesive to prevent short circuit.

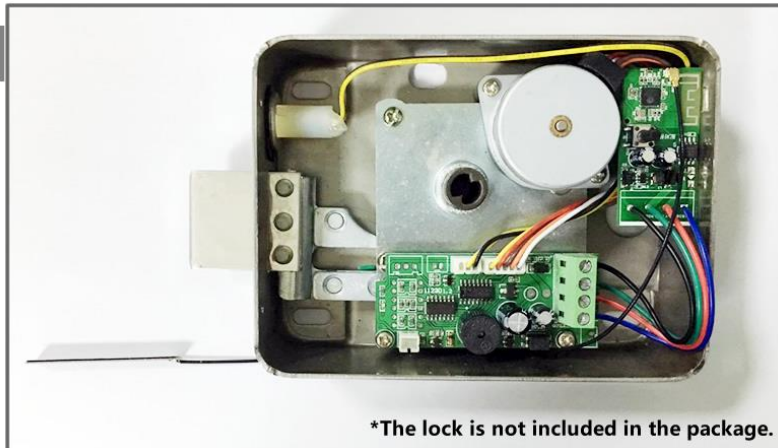

Your smart phone or tablet should have connected a 2.4G WiFi with internet.

1. Power up the GD-DC5 with your USB adapter and micro-USB cable.

The Red LED will blink.

2. Use the included Red & Black wire connect the GD-DC5 to your opener: Put each

end to the same terminals as the wall button wires are terminated to.

3. Use a tiny screw or nail to click the button in the GD-DC5, your garage door should activate.

Download and launch the eWeLink App from App Store or Google Play store. Create an account or log in with your eWeLink account.

During pairing process, make sure that your iOS or Android device and the GD-DC5 are within the range of your WiFi router.

The device only supports 2.4G Wi-Fi. If you use a 5G router (it provides two Wi-Fi signals: 5G and 2.4G), please select the 2.4G WiFi to connect your smart phone.

Make sure your router is MAC-open. If not, please cancel the router's MAC filtering setting first.

Add Device

Power up the device, the Blue LED will blink.

Keep pressing the button in the GD-DC5 for 5s, until the Blue LED blinks fast: blinks 3 times and repeats.

Launch eWeLink. Select the icon on the bottom “+” to add device.

Select the same 2.4G Wi-Fi as the one your mobile device connects with.

Input correct passwords. Then, tap Next.

It will auto-connect with the device. The process will take 1-3 minutes.

Once the process is complete, it will prompt you that you can rename the device. Enter a new name and Save.

If you fail to add it during the process, please send email to: support@eachen.cc.

